



GOLF-RFL190R|220R|260R|350R

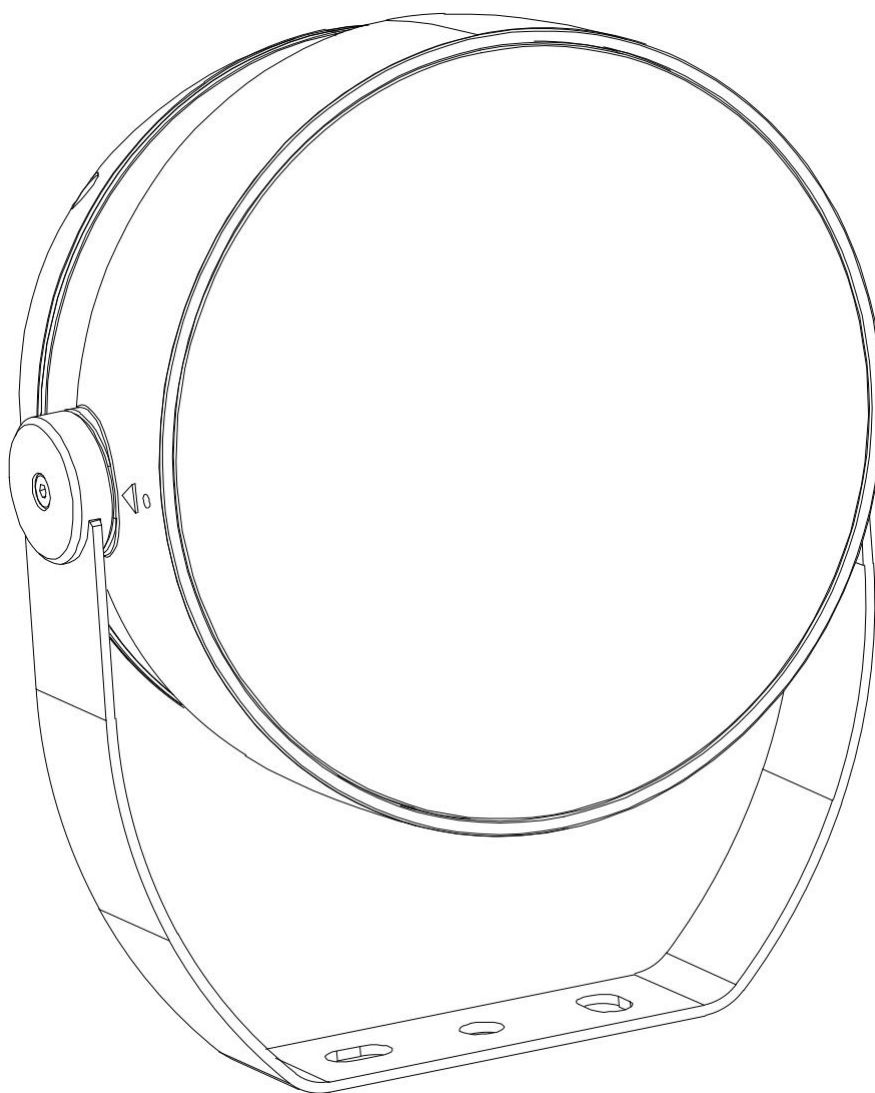


Thank you for purchasing the ROLEDs product. Please read this manual carefully before use and keep it for future reference.




Fixture must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations. This device falls under class one and must be grounded!

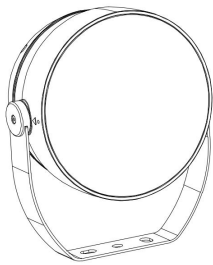


RFL190R

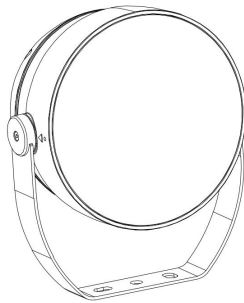

RFL220R

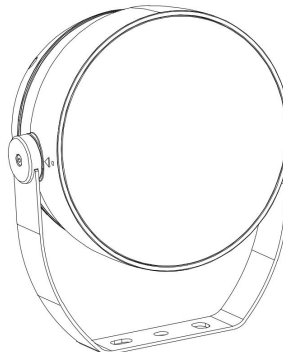

RFL260R




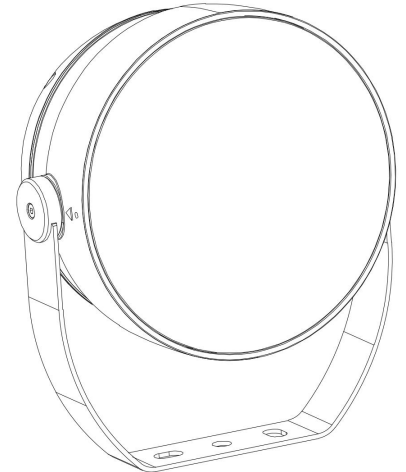


RFL350R

STEP 1: Bracket Installation


Use fasteners that are appropriate for use with your mounting surface.

①

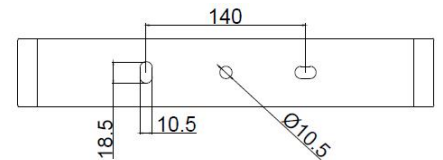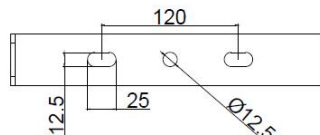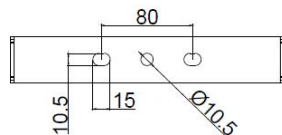
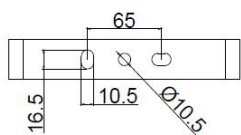


Drill two holes into the surface according the given dimensions.

②

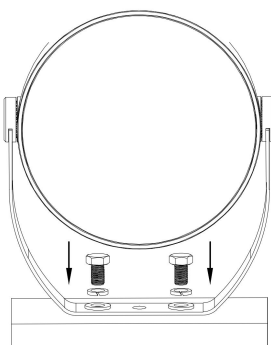

③







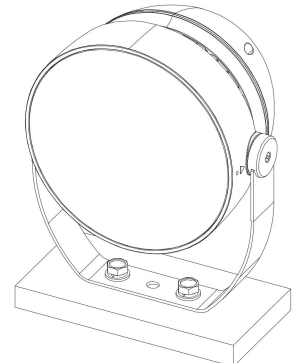
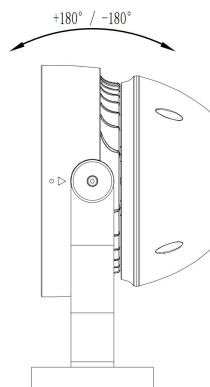




Fasten the Bracket of the fixture to the surface by two washers, spring washers and screws.

Use an Allen key to release tilting lock on each side of luminaire and adjust tilt of LED module in range of +180°/-180°.

STEP 2: Wiring Cable Installation

⚠ The connection of the power cord needs to be well connected in a waterproof junction box, which needs to be purchased separately.

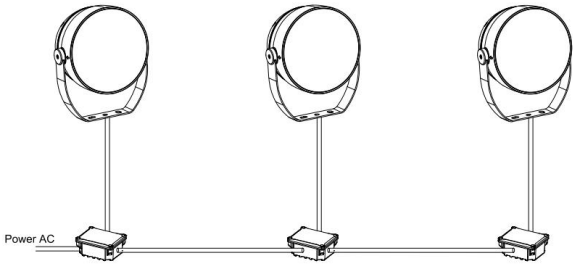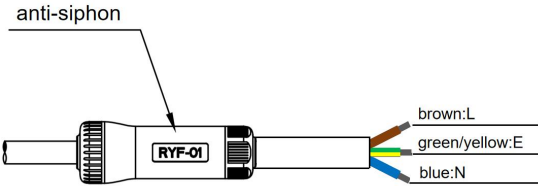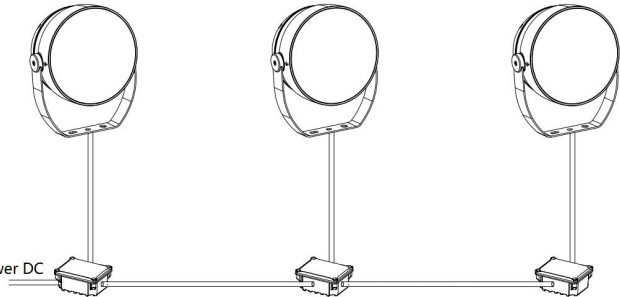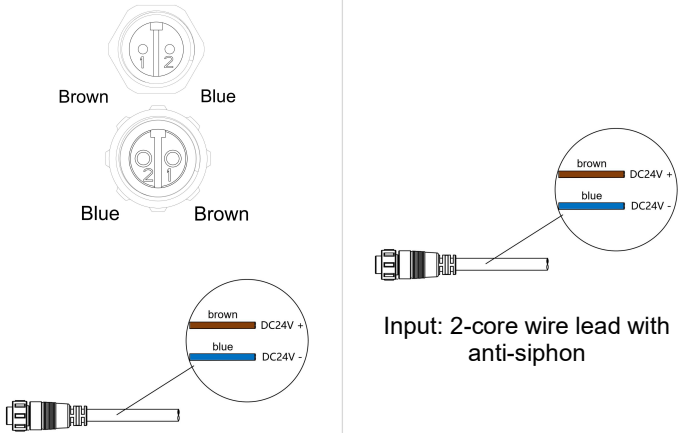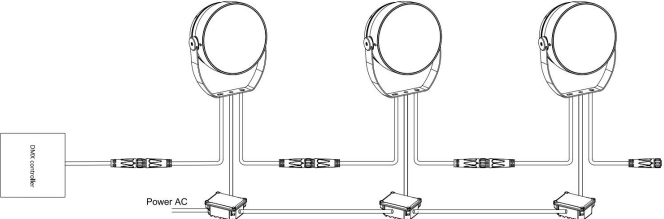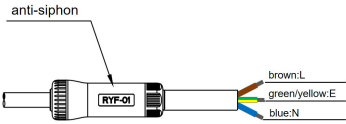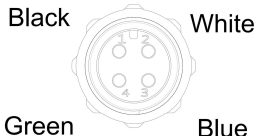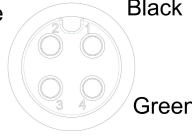ON/OFF AC 	 anti-siphon Power In: 3-core wire lead with anti-siphon
ON/OFF DC 	Cable connector or Wire lead with anti-siphon  Input: 2-pin Male Connector Input: 2-core wire lead with anti-siphon
DMX Control AC 	 anti-siphon Power-In: 3-core wire lead with anti-siphon  Data-In: 4-pin Male Connector  Data-Out: 4-pin Female Connector

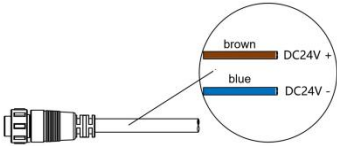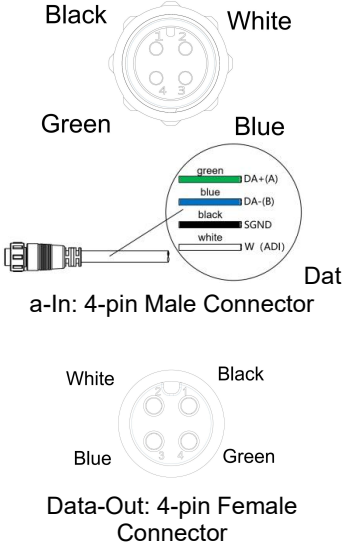
DMX Control DC	2 cable connector wire (In & Out 5-pin connector)	
	2 cable connector wire (In & Out 4-pin connector) & 1 wire lead	
	 Cable connector or Wire lead	

STEP 3: Installation of Accessories



Anti-glare parts

Light Baffle (Y)

①

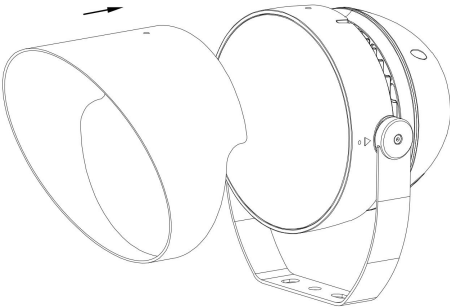

②

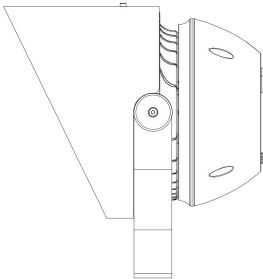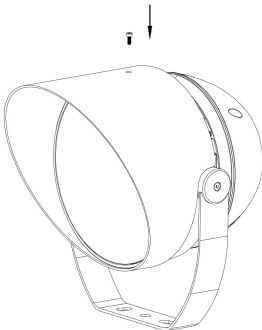

Mounting Bracket



Clamp Bracket for
Ø 60~90mm Pole
(JY)



Clamp Bracket 360 direction for
Ø 76mm Pole
(BG/76)



Surface & Pole Mounted Bracket for
Ø60-120mm Pole
(WX)





Pole Top Mounted Ø60mm
(TG)

Clamp Bracket 360 direction for



Ø 120mm Pole
(BG/120)

Clamp Bracket for Ø60~90mm Pole (JY)

①

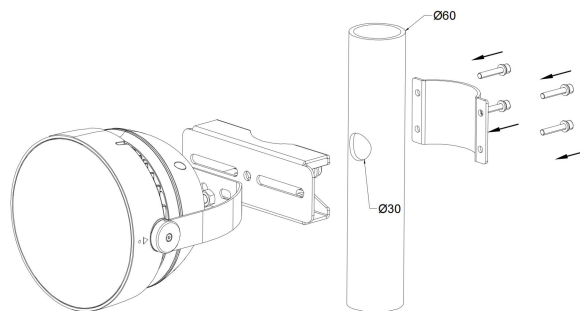
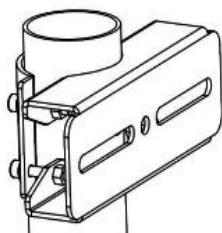


②

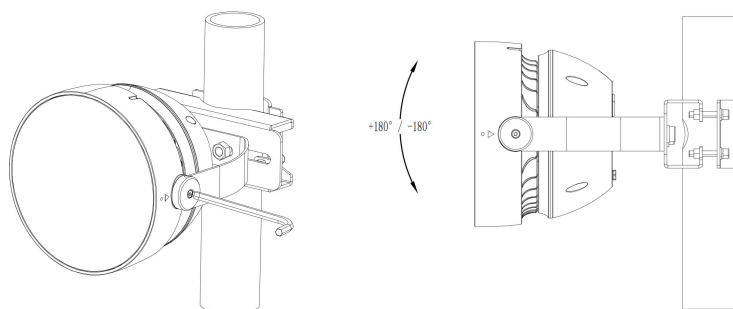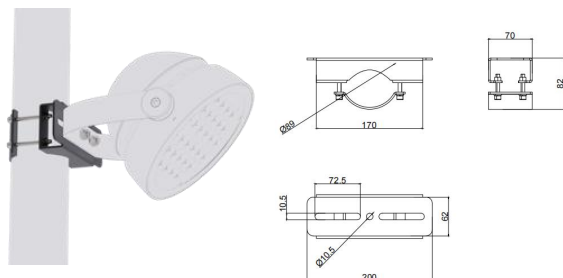


Clamp Bracket 360 direction for Ø76mm Pole (BG/76)
Clamp Bracket 360 direction for Ø120mm Pole (BG/120)

①

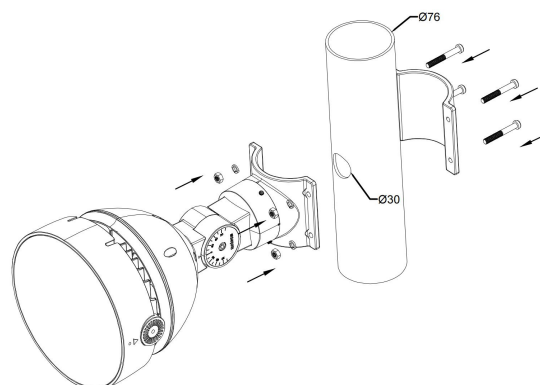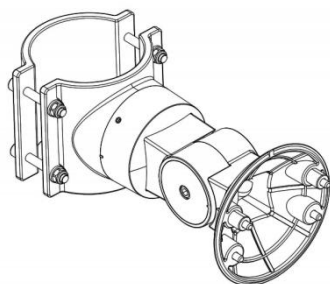



For RFL190R/ RFL220R Only

②

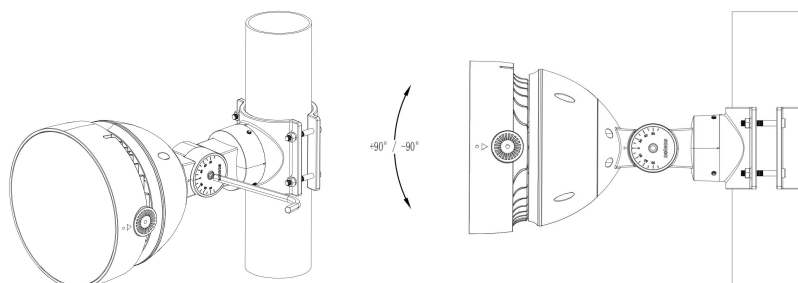




Technical drawing showing the assembly of the lighting fixture. The drawing includes three main components: the luminaire, the mounting bracket, and the wall plate. The luminaire is shown on the left, with a circular lens and a mounting bracket. The mounting bracket is shown in the center, with a circular base and a mounting plate. The wall plate is shown on the right, with a circular base and a mounting plate. Dimensions are indicated: Ø30 for the luminaire base, Ø8 for the mounting plate hole, and 105 for the mounting plate height.

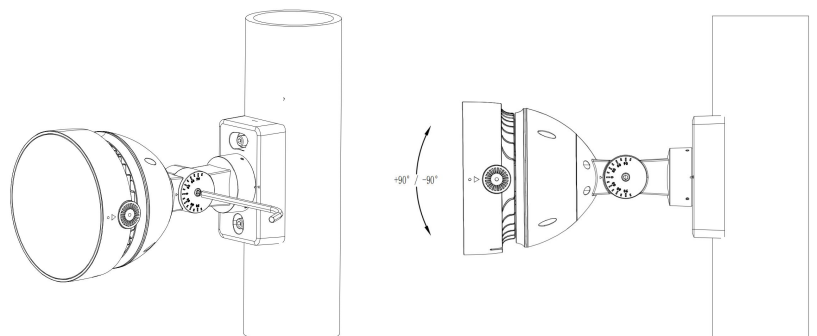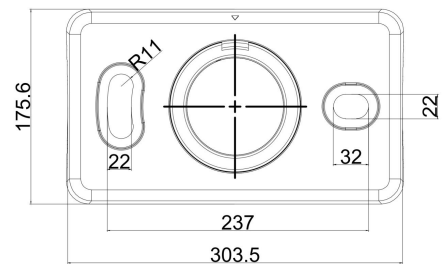


③

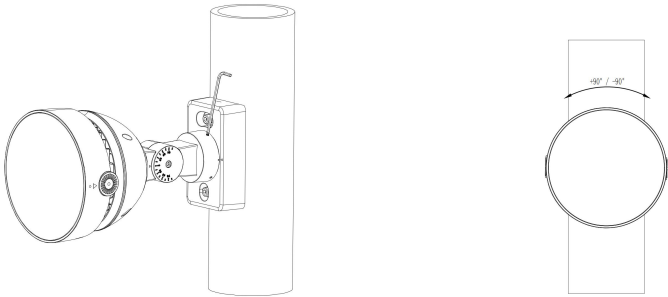


Pole Top Mounted Ø60mm (TG)




①

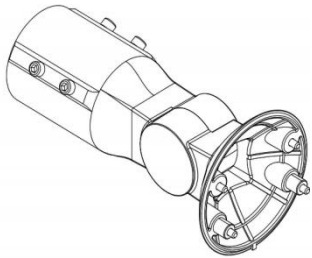




For RFL190R/ RFL220R Only

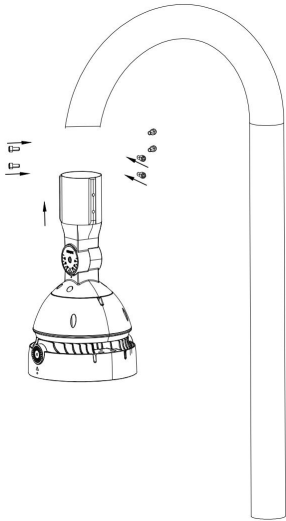

②

 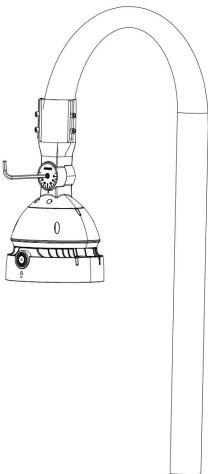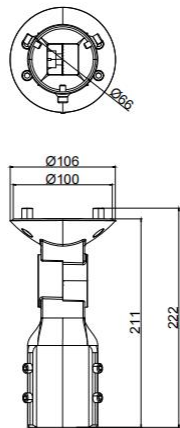

③

 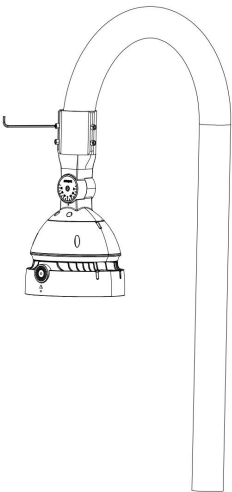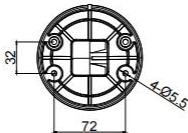

For the installation of the accessories, please refer to the relevant sheet.

WARNING & NOTICE

- ⚠ To ensure product quality and safety, please follow the operating instructions in a safe place and under power-off conditions.
- ⚠ Wire the power supply to the electrical mains only after the connection to the products has been carried out.
- ⚠ The cable should be suitably protected against direct contact with the ground and avoid letting the product come into direct contact with the ground.
- ⚠ Before powering up the system, please ensure that the polarity is connected correctly. Incorrect connection may cause product malfunction.
- ⚠ Do not install the fixture in areas where water tends to collect.
- ⚠ Under any possible circumstances causing outer cables damaged, excessively bent, pulled or squeezed by external forces, the latter should be replaced by the manufacturer, or by the corresponding service, or by an appropriated and qualified member of staff in order to avoid all risk of danger.
- ⚠ Should the glass break, the product cannot be used.
- ⚠ Do not stare at the operating lighting source.
- ⚠ After 45mins of the sunset or before 45mins of the sunrise are allowed daily operation period for product temperatures $>25^{\circ}\text{C}$.
- ⚠ Fixtures not suitable to be covered in thermally-insulating material.

