


RSL50

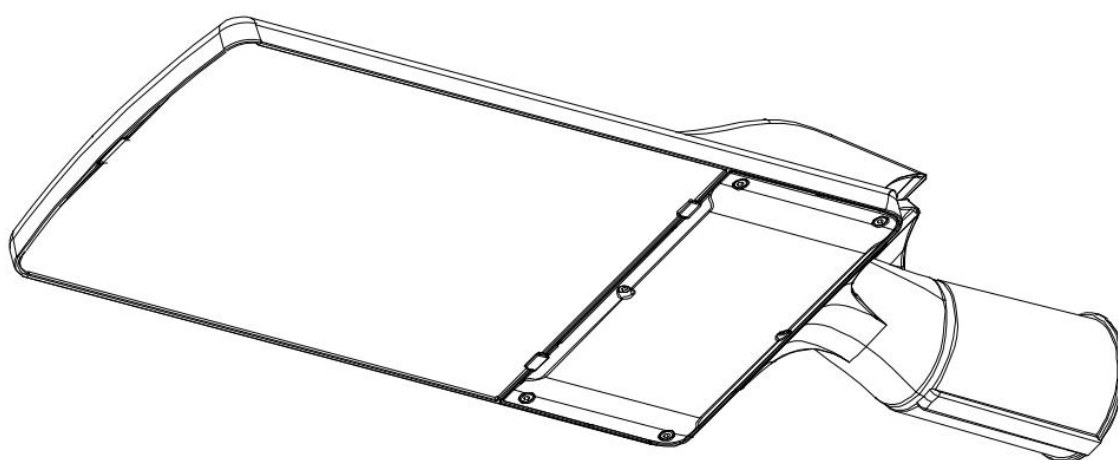

 


Thank you for purchasing the ROLEDs product. Please read this manual carefully before use and keep it for future reference.




Fixture must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations. This device falls under class one and must be grounded!

This luminaire is available in four sizes and two mounting methods: pole top mounting and intermediate fitting. The controller on the top of the luminaire is detachable; please select the appropriate product and mounting method according to your needs.

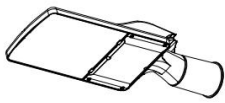


RLD501

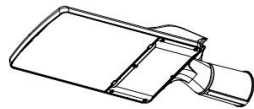 


RLD502




RLD503

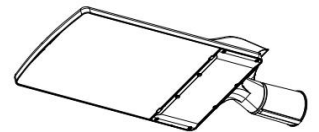

RLD504

 


Intermediate Fitting

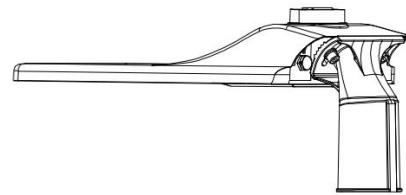

Pole Top Mounting

The following is the adjustment process from intermediate fitting to pole top mounting, for your reference when needed:

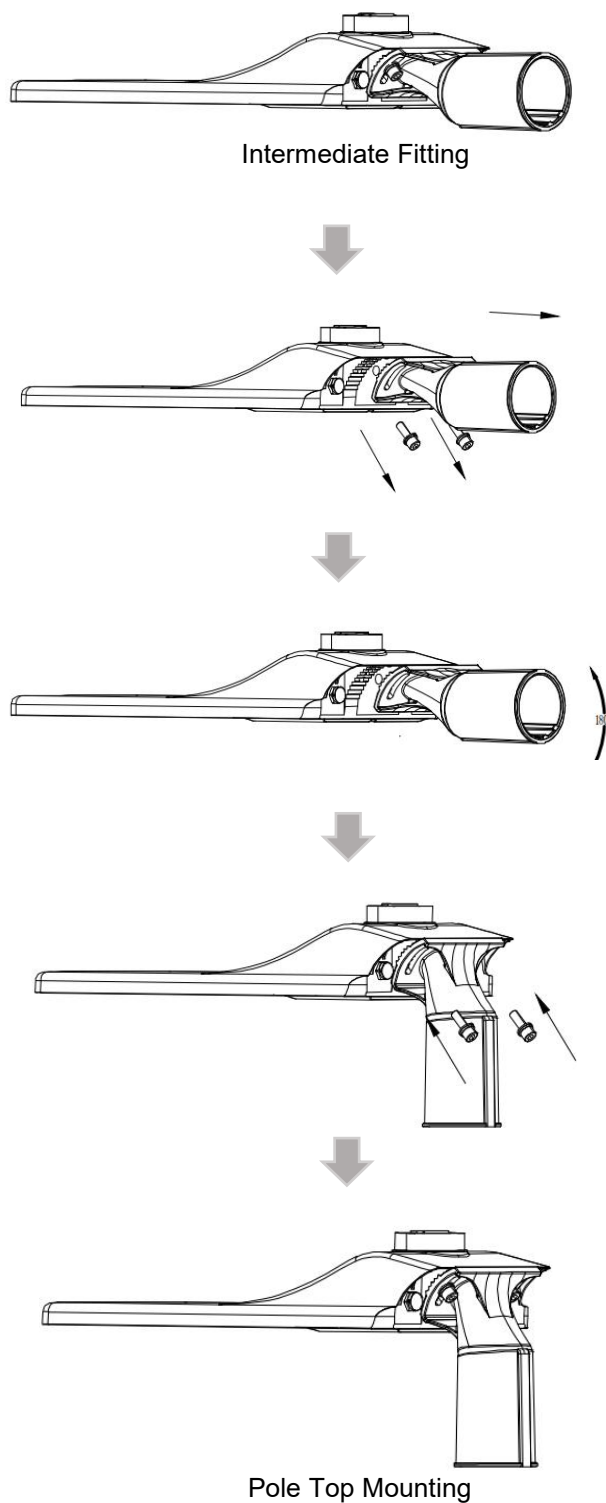

STEP 1: Luminaire Installation


A. Intermediate Fitting

①



Use an Allen key to loosen the screws at the positions shown in the figure to adjust the luminaire's tilt angle, with an adjustable range of $+15^\circ$ / -15° . Retighten the screws after adjusting to the appropriate angle.


②

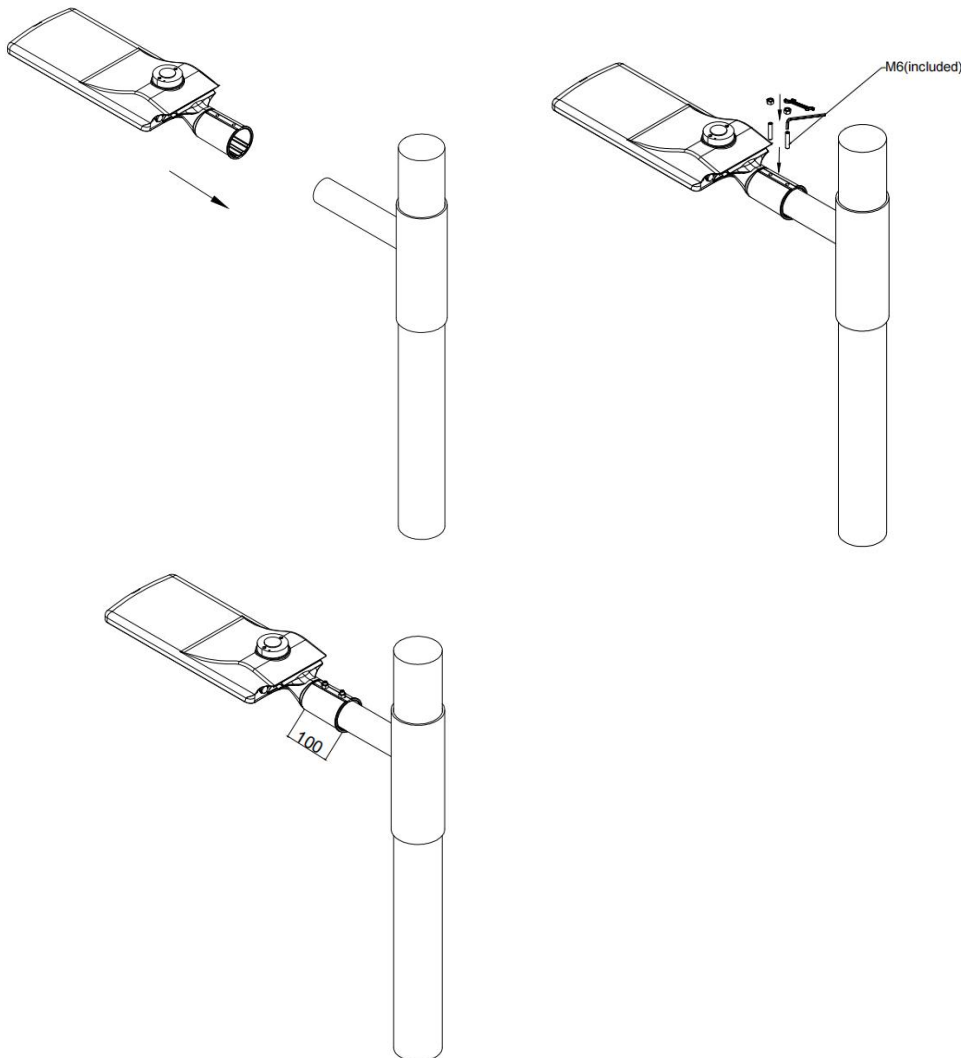

Loosen the screws at the bottom of the luminaire, mount the luminaire on the bracket, and retighten the screws as shown in the diagram after adjusting the luminaire to the correct position. The insertion depth of the lamp pole shall be between 80-100mm.


B.Pole Top Mounting

①

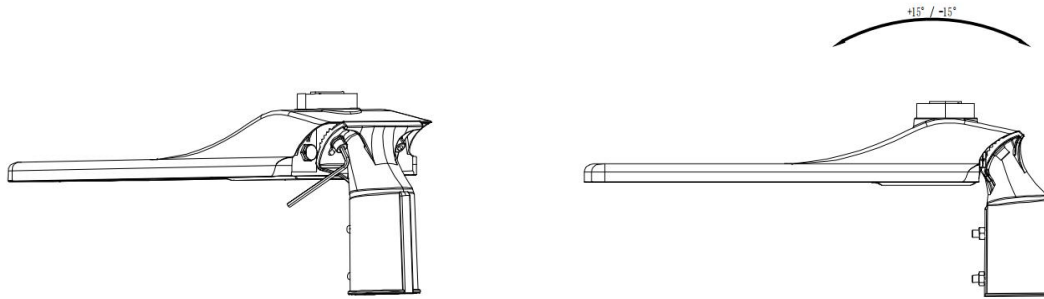

Use an Allen key to loosen the screws at the positions shown in the figure to adjust the luminaire's tilt angle, with an adjustable range of $+15^{\circ}$ / -15° . Retighten the screws after adjusting to the appropriate angle.

②


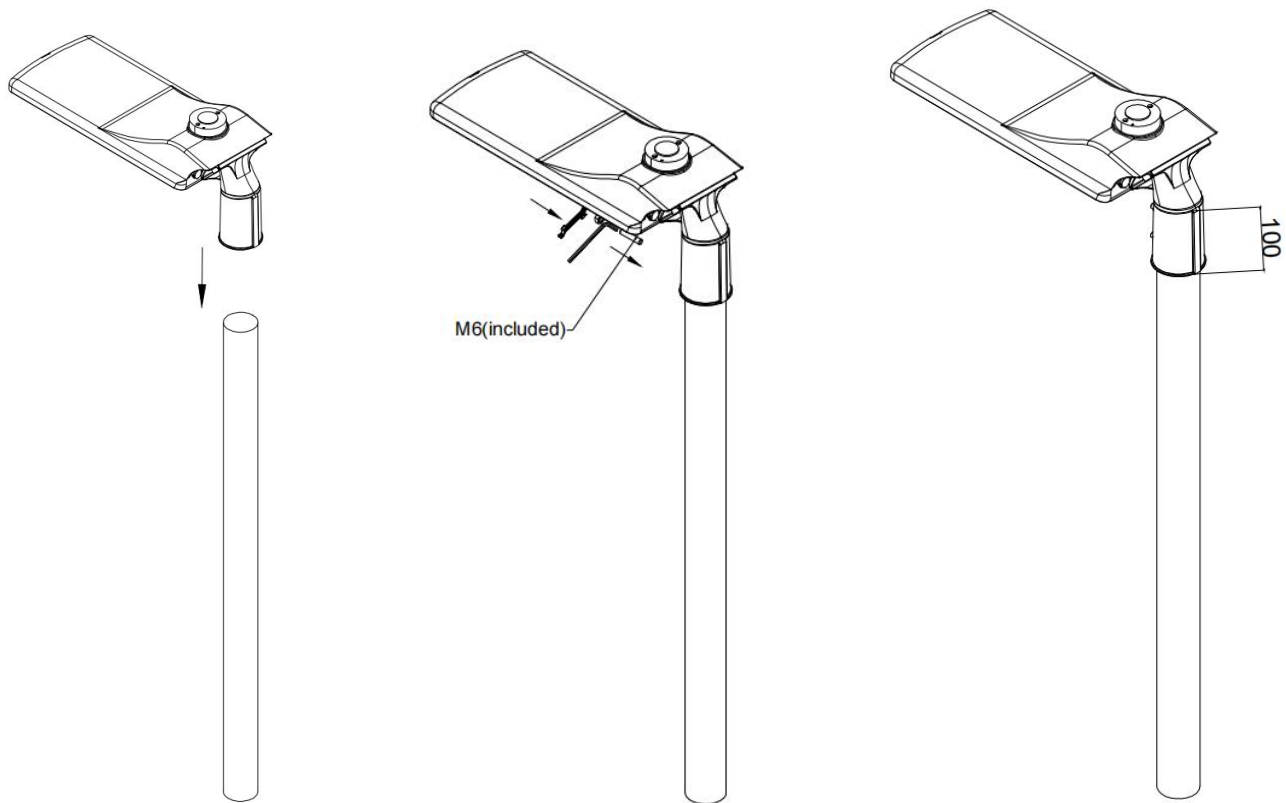


Loosen the screws at the bottom of the luminaire, mount the luminaire on top of the lamp pole, and retighten the screws as shown in the diagram after adjusting the luminaire to the correct position. The insertion depth of the lamp pole shall be between 80-100mm.

STEP 2: Wiring Cable Installation

⚠ The connection of the power cord needs to be well connected in a waterproof junction box, which needs to be purchased separately.

ON/OFF AC

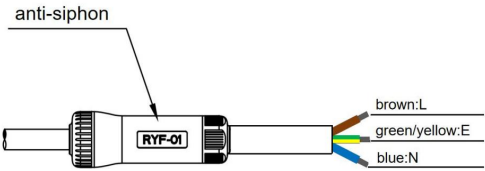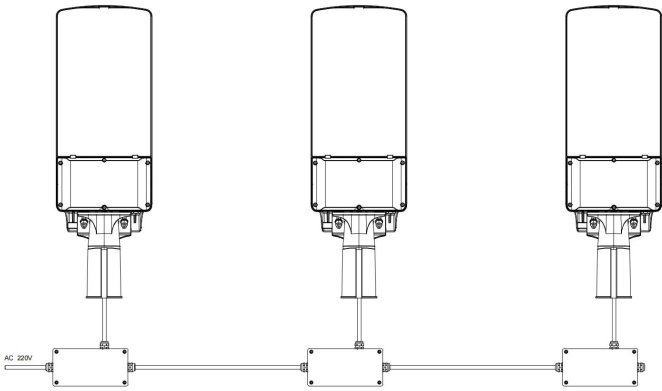

Power In: 3-core wire lead with anti-siphon

WARNING & NOTICE

- ⚠ To ensure product quality and safety, please follow the operating instructions in a safe place and under power-off conditions.
- ⚠ Wire the power supply to the electrical mains only after the connection to the products has been carried out.
- ⚠ The cable should be suitably protected against direct contact with the ground and avoid letting the product come into direct contact with the ground.
- ⚠ Before powering up the system, please ensure that the polarity is connected correctly. Incorrect connection may cause product malfunction.
- ⚠ Do not install the fixture in areas where water tends to collect.
- ⚠ Under any possible circumstances causing outer cables damaged, excessively bent, pulled or squeezed by external forces, the latter should be replaced by the manufacturer, or by the corresponding service, or by an appropriated and qualified member of staff in order to avoid all risk of danger.
- ⚠ Should the glass break, the product cannot be used.
- ⚠ Do not stare at the operating lighting source.
- ⚠ After 45mins of the sunset or before 45mins of the sunrise are allowed daily operation period for product temperatures $>25^{\circ}\text{C}$.
- ⚠ Fixtures not suitable to be covered in thermally-insulating material.
- ⚠ Secondary protection is required for bare wire connections: For a single core, first wrap it with waterproof tape and then insulate it with electrical tape; then wrap the entire core assembly with waterproof tape again, followed by insulation with electrical tape (Note: This method is not recommended as it does not comply with specifications).
- ⚠ The luminaire must be reliably grounded.

