


RTL201

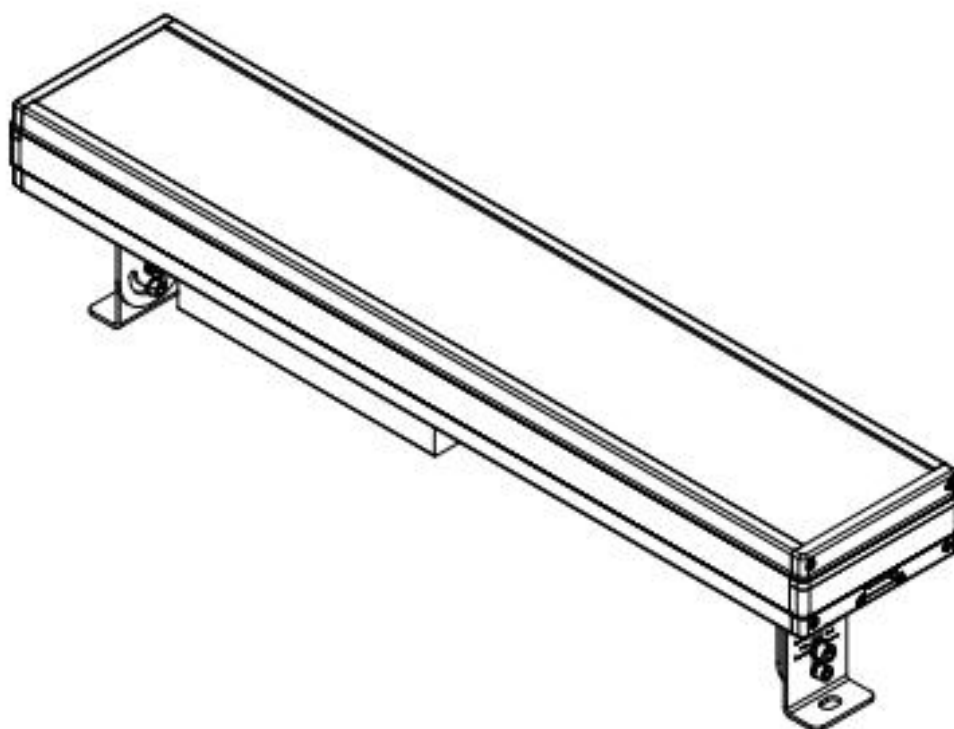





Thank you for purchasing the ROLEDs product. Please read this manual carefully before use and keep it for future reference.




Fixture must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations. This device falls under class one and must be grounded!

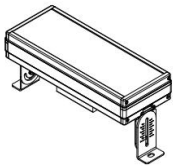

RSD201-300

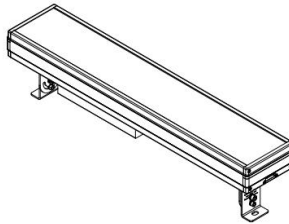

RSD201-600

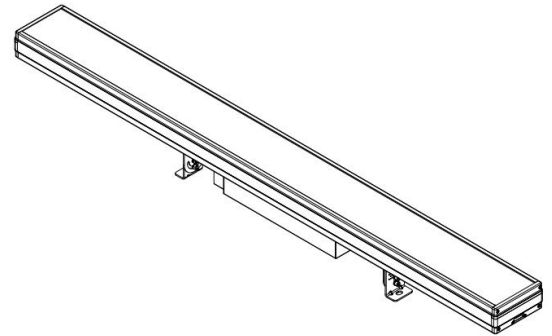


RSD201-1200

STEP 1: Luminaire Installation


This luminaire is available with multiple combination options. Please select the appropriate number of modules according to your requirements.

①

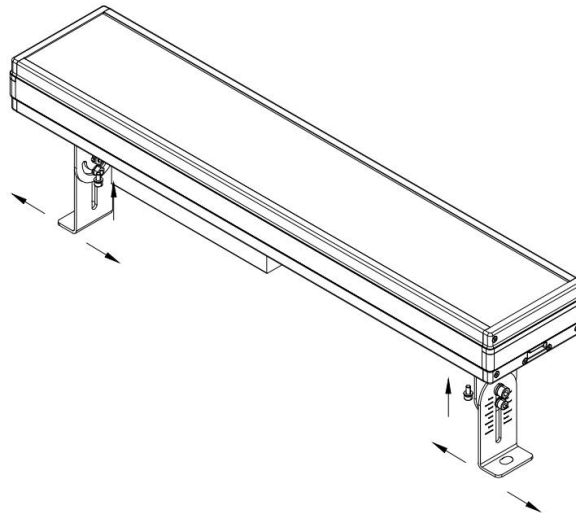


Loosen the screws at the bottom of the luminaire, slide the brackets to the appropriate position, then retighten the screws.

②

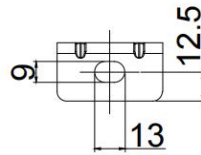


Drill holes in the mounting surface according to the adjusted spacing between two brackets and provided hole dimensions.

③

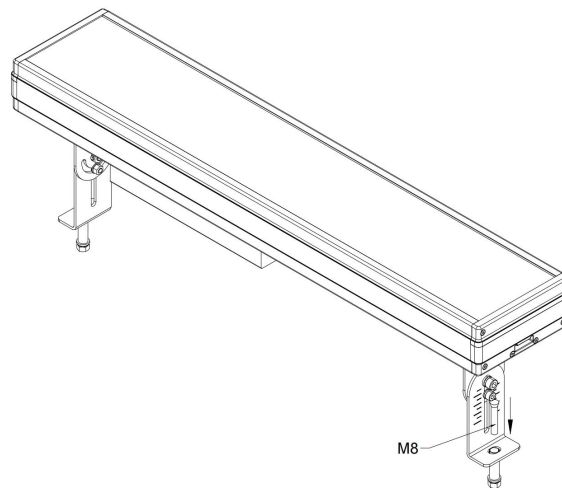

Insert the lower half of the expansion screws into the holes, align the luminaire with the two holes and place it on the mounting surface, then install the upper half of the screws.

④


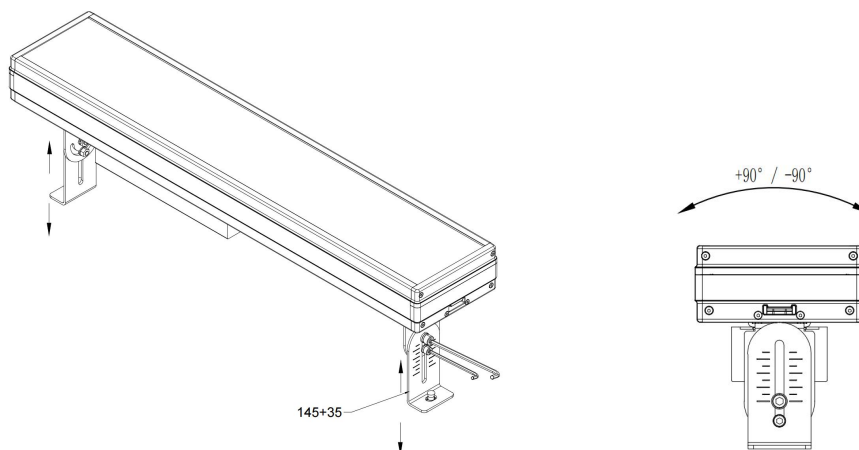


Use an Allen key to loosen the screws on both sides of the brackets to adjust the bracket. The height adjustable range is 145+35, and its tilt angle adjustable range is +90°/-90°. After adjusting to the appropriate bracket height and tilt angle, retighten the screws.

STEP 2: Wiring Cable Installation

⚠ The connection of the power cord needs to be well connected in a waterproof junction box, which needs to be purchased separately.

 ON/OFF AC

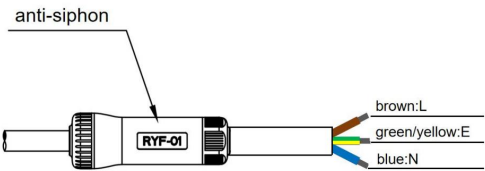

Power In: 3-core wire lead with anti-siphon

WARNING & NOTICE

- ⚠ To ensure product quality and safety, please follow the operating instructions in a safe place and under power-off conditions.
- ⚠ Wire the power supply to the electrical mains only after the connection to the products has been carried out.
- ⚠ The cable should be suitably protected against direct contact with the ground and avoid letting the product come into direct contact with the ground.
- ⚠ Before powering up the system, please ensure that the polarity is connected correctly. Incorrect connection may cause product malfunction.
- ⚠ Do not install the fixture in areas where water tends to collect.
- ⚠ Under any possible circumstances causing outer cables damaged, excessively bent, pulled or squeezed by external forces, the latter should be replaced by the manufacturer, or by the corresponding service, or by an appropriated and qualified member of staff in order to avoid all risk of danger.
- ⚠ Should the glass break, the product cannot be used.
- ⚠ Do not stare at the operating lighting source.
- ⚠ After 45mins of the sunset or before 45mins of the sunrise are allowed daily operation period for product temperatures $>25^{\circ}\text{C}$.
- ⚠ Fixtures not suitable to be covered in thermally-insulating material.
- ⚠ Secondary protection is required for bare wire connections: For a single core, first wrap it with waterproof tape and then insulate it with electrical tape; then wrap the entire core assembly with waterproof tape again, followed by insulation with electrical tape (Note: This method is not recommended as it does not comply with specifications).
- ⚠ The luminaire must be reliably grounded.

