


Picchio-RFL35R | 50R

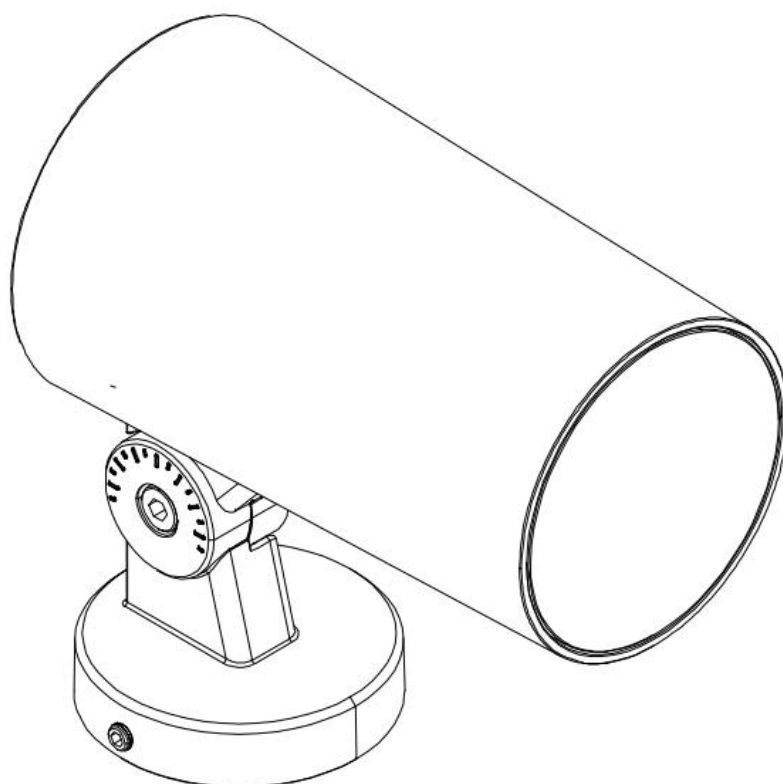





Thank you for purchasing the ROLEDs product. Please read this manual carefully before use and keep it for future reference.



Fixture must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations. This device falls under class one and must be grounded!

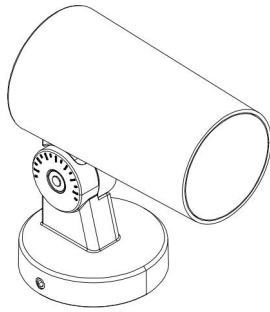

RTG35R

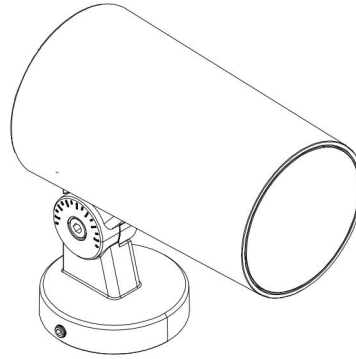


RTG50R

STEP 1: Bracket Installation


This luminaire is compatible with two types of brackets; please select the appropriate one according to your requirements.

①

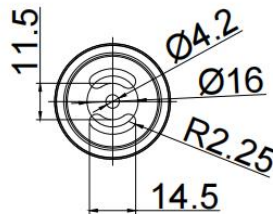


Drill two holes into the surface according the given dimensions.

②

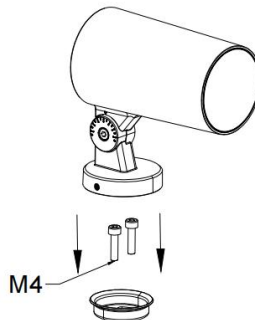


Fasten the bracket to the mounting surface by two screws.

③

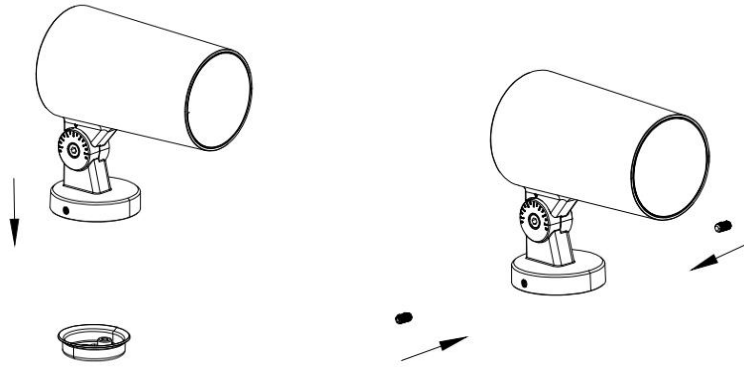

Place the luminaire onto the bracket, then install two screws on both sides of the bracket to secure the luminaire in place.

④

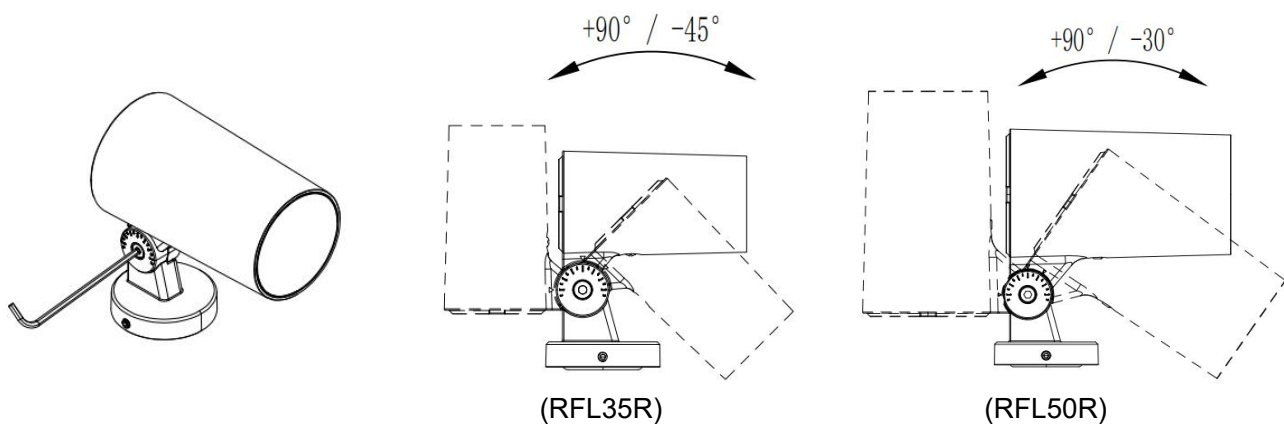


Loosen the screw on the side of the luminaire using an Allen key to adjust the tilting angle. The tilting angle range of RFL35R is $+90^{\circ}/-45^{\circ}$, while that of RFL50R is $+90^{\circ}/-30^{\circ}$. Retighten the screw after adjusting to the desired angle.

①




Prepare RFL35R/ 50R, BD bracket and fastening screws

②

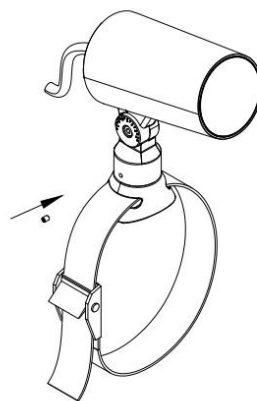

Align the lamp bottom connector with the bracket top port, take the screw to match the hole.





③

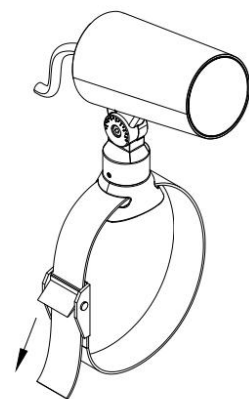

Open the clamp strap, wrap the assembly around the pipe, fasten the buckle. Rotate the lamp to adjust light angle, installation finished.


STEP 2 Wiring Cable Installation

⚠ The connection of the power cord needs to be well connected in a waterproof junction box, which needs to be purchased separately.

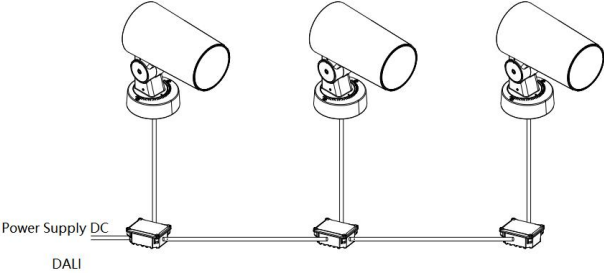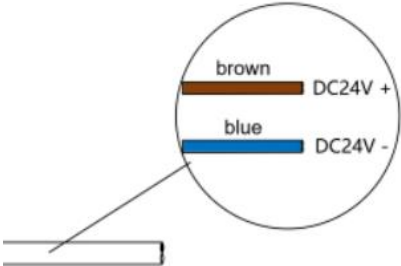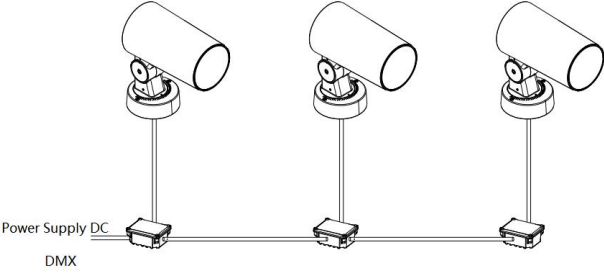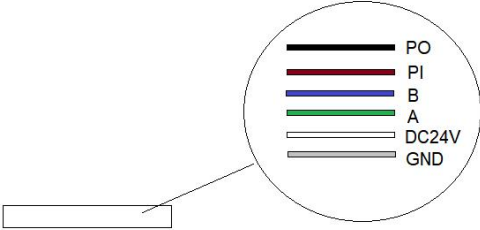ON/OFF 0-10V DALI DC	2-core Wire Lead
	 Input: 2-core Wire Lead
DMX Control DC	6-core Wire Lead
	 Input: 6-core Wire Lead



STEP 3: Accessory Installation

Mounting Brackets


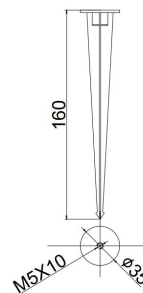


Spike
(SPM5)

①

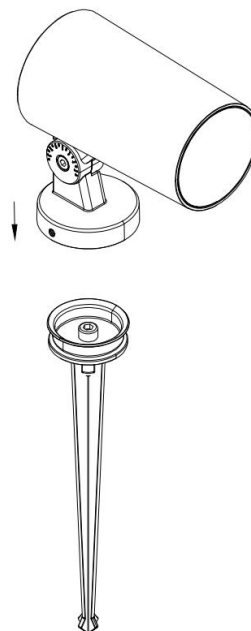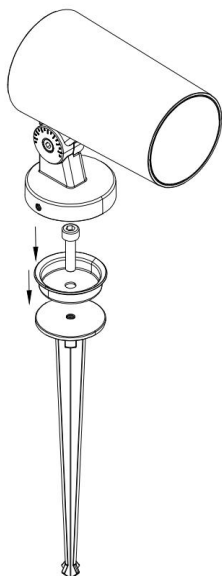

②

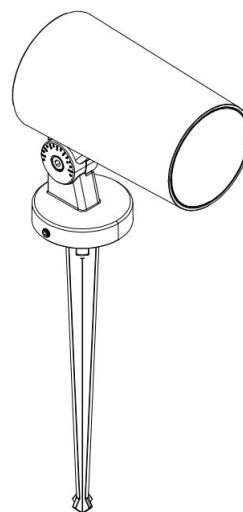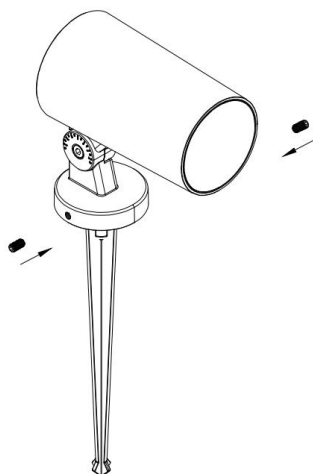

WARNING & NOTICE

- ⚠ To ensure product quality and safety, please follow the operating instructions in a safe place and under power-off conditions.
- ⚠ Wire the power supply to the electrical mains only after the connection to the products has been carried out.
- ⚠ The cable should be suitably protected against direct contact with the ground and avoid letting the product come into direct contact with the ground.
- ⚠ Before powering up the system, please ensure that the polarity is connected correctly. Incorrect connection may cause product malfunction.
- ⚠ Do not install the fixture in areas where water tends to collect.
- ⚠ Under any possible circumstances causing outer cables damaged, excessively bent, pulled or squeezed by external forces, the latter should be replaced by the manufacturer, or by the corresponding service, or by an appropriated and qualified member of staff in order to avoid all risk of danger.
- ⚠ Should the glass break, the product cannot be used.
- ⚠ Do not stare at the operating lighting source.
- ⚠ After 45mins of the sunset or before 45mins of the sunrise are allowed daily operation period for product temperatures $>25^{\circ}\text{C}$.
- ⚠ Fixtures not suitable to be covered in thermally-insulating material.

